



Mixer

Inputs


5 inputs are DC-coupled to allow audio or CV mixing

Mute Switches

Switches mute each channel. Flip up to add to the mix and down to disconnect.

Unity Channel

The 5th input does not have an attenuation knob. It is added to the mix at unity gain.

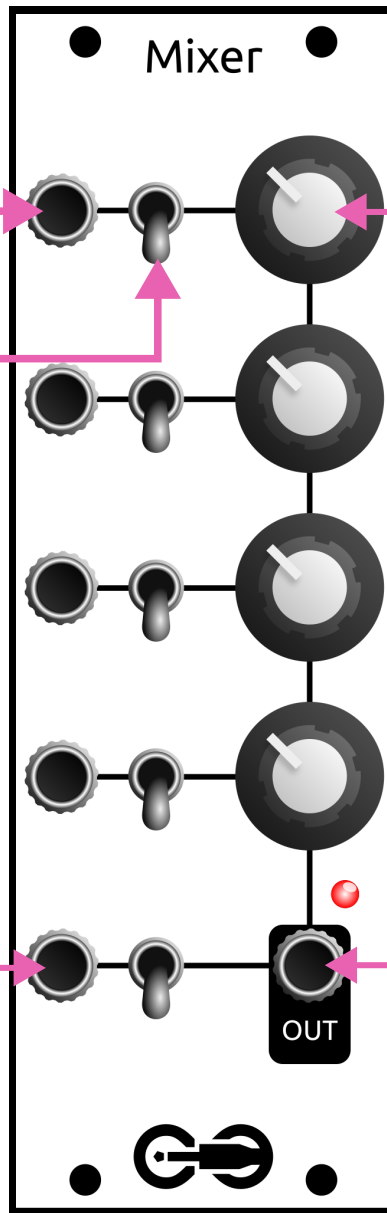

Knobs

Knobs control the level of each channel in the mix. Logarithmic potentiometers are ideal for audio mixing. Fully clockwise is unity gain; this mixer cannot boost signals, only attenuate them.

Output & Daisy Chain

Single mix output. The output is normalised to a connection on the back of the board so multiple modules can be daisy chained together into a larger mixer. Connecting to the output jack removes all upstream channels from the final mix.